


# UFO Ballistic NailScrews® for Treated Lumber

Cdn. Pat. [2,648,647] / USA Patent Pending

*Screws that install with a pneumatic nailer.*



**21° or 34°**  
**Plastic Strip: 2½" or 3"**  
**.113 Diameter**  
**#2 Phillips, Square, or**  
**Combo Drive™ Flat Head**  
**1,000 per Box**

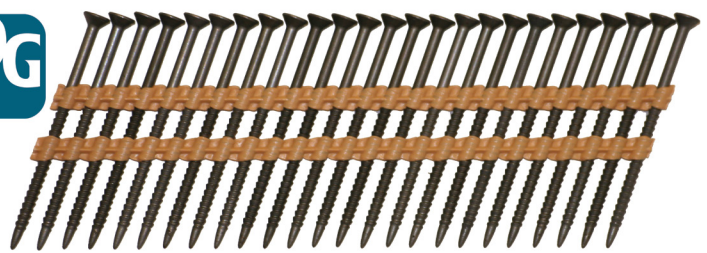


21° Part # PTHDNS212113SQ, PTHDNS212113PH, PTHDNS212113SP  
PTHDNS300113SQ, PTHDNS300113PH, & PTHDNS300113SP  
34° Part # PTPSNS212113SP, & PTPSNS300113SP  
Other sizes, coatings, & heads available.



**15° Wire Coil: 2½" or 3"**  
**.113 Diameter**  
**#2 Square Flat Head**  
**800 per Box**

Part # PTWCNS212113SQ & PTWCNS300113SQ  
Other sizes available.

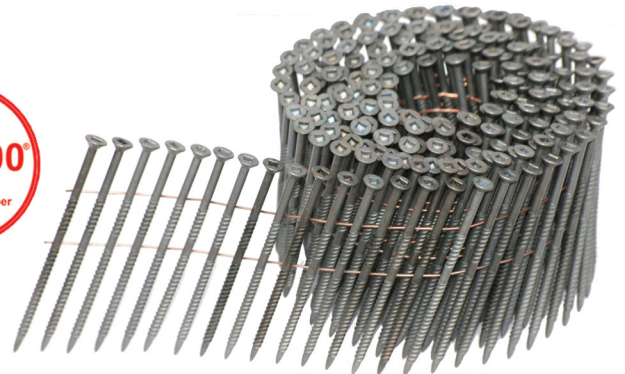

**Ask about our full line of code  
approved (IAPMO #0133)  
NailScrews® for subfloor.**



For technical information,  
visit [911-NAILS.COM](http://911-NAILS.COM).



# Using UFO Ballistic NailScrews® with Treated Lumber

Cdn. Pat. [2,648,647] / USA Patent Pending

## TOOLS:

**PLASTIC STRIP:** Most 21° strip framing nailers including UFO nailers, Hitachi, Senco, & Bostitch.

Most 34° paper strip nailers including UFO nailers, Hitachi, Senco, & Paslode F350S, PF350S, & CF325Li.



## WIRE COIL:

Most 15° wire coil nailers including UFO nailers, Hitachi, Senco, & Bostitch.

## TIPS:

- Test at 110 pounds of air pressure at the tool.
- Establish and maintain consistent air pressure during installation.
- Use a pneumatic nailer with the capability of adjusting the depth of drive.
- Use no-mar tips on your pneumatic nailer.
- Most Ballistic NailScrews® require smaller diameters than regular bulk screws since they are installed with only a slight turning motion.
- Cedar and Redwood contain tannin that can cause streaking.
- If removal is necessary, go slowly the first two revolutions while the threads are cutting into the wood fibers.
- Always wear safety glasses and protective gear while installing Ballistic NailScrews®.



For technical information and compatible nailers, visit [911-NAILS.COM](http://911-NAILS.COM).